

HITACHI
PC/PROJECTOR
CP-RX61

Mandis Shop S.L.
Sant Cugat del Vallès - Barcelona
info@mandis.es

Layout Keys	Direct	Shift	Layout Keys	Direct	Shift
OFF	POWER				
ON	POWER				
SRC SEARCH	SEARCH				
AUTO MODE	AUTO				
HIDE BLANK	BLANK				
ASPECT RE-SYNC	ASPECT				
MENU INFO	MENU				
EXIT LAMP	ESC				
PICT FREEZE	FREEZE				
MUTE FOCUS	MUTE				
ZOOM/KEYSTONE+	ZOOM+	MAGNIFY+			
ZOOM/KEYSTONE-	ZOOM-	MAGNIFY-			
VOL/PAGE+	VOL+	FOCUS+			
VOL/PAGE-	VOL-	FOCUS-			
/\	UP				
√	DOWN				
<	LEFT				
>	RIGHT				
OK	ENTER				
1 POINTER	POSITION				
2 MOUSE LEFT B.	MAGNIFY ON				
3 MOUSE RIGHT B.	MAGNIFY OFF				
4 VGA1	COMPUTER				
5 VGA2					
6 COMP	RGB				
7 S-VIDEO					
8 VIDEO	VIDEO				
9 HDMI					
0 LAN	[/ \] / KEYSTONE				
USB	RESET				
PIP	PIP				