

PHILIPS
TV
242254902307

MANDIS SHOP S.L.
SANT CUGAT DEL VALLES
info@mandis.es



Layout Keys	Direct	Shift	Layout Keys	Direct	Shift
POWER	Power		V	Down	
MUTE	Mute		EXIT		
1	1		BACK	Back (D1)	
2	2		VOL+	Vol+	
3	3		VOL-	Vol-	
4	4		INFO	[i] (D2)	
5	5		FAV(LIST)		
6	6		CH+	CH+	
7	7		CH-	CH-	
8	8		TEXT	[=] (B3)	
9	9		< ?	[[]]/Surround (B2)	
0	0		...	[] (E2)	
VOD	[II] (C1)		TV/RADIO	♪ (E1)	
MENU	Menu (A1)		OPT+	[=]/Options (C2)	
>PLAY			SOURCE	Input (B4)	
PAUSE			V-FORMAT	[<>]/Format (B1)	
]STOP			WIDE		
oRECORD					
<<					
>>					
<<					
>>					
RED	Red				
GREEN	Green				
YELLOW	Yellow				
BLUE	Blue				
MEDIA					
EPG(GUIDE)					
OK	OK				
^	Up				
<	Left				
>	Right				