

 

 

 


 


 


 

 

 




 

 



 




 






 


 






Original	Substituto	Original	Substituto
 Power	 Power	 CH+	 CH+ / Page+
 Mute	 Mute / Dimmer	 Vol-	 Vol-
 1	 1	 Source	 AV / Input / RDS
 2	 2	 CH-	 CH- / Page-
 3	 3	 Up	 Up
 4	 4	 Left	 Left
 5	 5	 OK	 OK
 6	 6	 Right	 Right
 7	 7	 Exit	 Exit / Cancel / Clear
 8	 8	 Down	 Down
 9	 9	 Menu	 Menu / Home
 CH.List	 Smart / List	 Rec	 Rec / Rec Mode
 0	 0	 Timeshift	 Shift + Pause / Step /
 Recall	 Back / Return	 Timer	 Shift + Sleep / Timer
 Vol+	 Vol+	 Rec.List	 Shift + Smart / List
 PIC.Mode	 Picture / Format	 Red	 Red / Netflix / Search
 S.Mode	 Sound / Title	 Green	 Green / APP / Repeat

Original	Substituto	Original	Substituto
 Power	 MUTE	 SHIFT	
 TV	 DVD	 SAT	 AUX
 SLOW	 STEP-FREEZE	 HOLD	 REC MODE
 TUNE-	 TUNE+	 PRESET-	 PRESET+
 TITLE	 LANG UII	 EQ	 SURROUND
 SOUND	 AUDIO	 SUBTITLE	 PROGRAM
 FORMAT	 SIZE	 TIMER	 TV RADIO
 PICTURE	 ZOOM	 SLEEP	 RDS
 TOP MENU	 OPT-TOOLS	 GOTO	 AV INPUT
 D.MENU	 SETUP	 TEXT	 AV INPUT
 HOME	 ANGLE	 MENU	 INFO
 CLEAR	 OK	 RETURN	 BACK
 EXIT	 SMART	 CH PAGE	
 CANCEL	 MEDIA	 DISPLAY	
 + VOL	 TV	 DVD	 CD - STB
 - VOL	 VIDEO	 TAPE	 TUNER
 1	 AUX - HDD	 USB	 BLUETOOTH
 2	 7	 8	 9
 3	 GUIDE EPG	 HDMI - BAT	 FC
 4	 0	 FAV MARKER	
 5	 NETFLIX	 APP	 YouTube
 6	 SEARCH	 REPEAT	 Prime Video
 7	 REPEAT	 REPEAT A-B	 RANDOM
 8	 Mandis SHOP	www.mandis.tv	





Original	Substituto	Original	Substituto
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Aspect		Shift + Picture / Format
	Tv/Radio		TV/Radio /
	Sleep		Sleep / Timer
	Subtitle		Subtitle / EQ
	Index		Info / Angle
	Reveal		D.Menu / Top
	Audio		Audio / Lang I/II
	Display		Display / Media
	Text		Text / Goto
	Size		Zoom / Size
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Subpage		Setup / OPT /
	Stop		Stop / Hold
	Hold		Shift + Stop / Hold

Original	Substituto	Original	Substituto
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+

