



Original	Substituto	Original	Substituto
	POWER		Power
	INFO		Info / Angle
	HDMI CONTROL		Smart / List
	SLEEP		Sleep / Timer
	SCREEN		Picture / Format
	SOURCE		AV / Input / RDS
	PRESETS		Setup / OPT /
	1		1
	2		2
	3		3
	ZOOM/RED/▲		Zoom / Size
	ZOOM/RED/▲		Shift + CH+ /
	ZOOM/RED/▲		Red / Netflix / Search
	4		4
	5		5
	6		6
	REPEAT/GREEN/▼		Shift + CH- / Page-
	REPEAT/GREEN/▼		Green / APP / Repeat
	7		7
	8		8
	9		9
	ROOT/YELLOW		Yellow / YouTube / Repeat
	RETURN		Back / Return
	0		0
	MENU		Menu / Home
	TITLE/BLUE		Sound / Title
	TITLE/BLUE		Blue / Prime Video / Random
	UP		Up
	LEFT		Left
	OK/SELECT		OK
	RIGHT		Right
	DOWN		Down
	P+		CH+ / Page+
	P-		CH- / Page-





Original	Substituto
	VOL - Vol-
	VOL + Vol+
	PC FAV MARKER Fav / Marker / PC
	LANG I/II Audio / Lang I/II
	EQ SUBTITLE Subtitle / EQ
	DIMMER MUTE Mute / Dimmer
	SHIFT + RETURN BACK Shift + Back / Return
	GUIDE EPG Guide / EPG / -/-
	TOP MENU D.MENU D.Menu / Top
	GOTO TEXT Text / Goto
	CLEAR EXIT CANCEL Exit / Cancel / Clear
	MEDIA DISPLAY Display / Media
	SHIFT + ANGLE INFO Shift + Info / Angle
	SHIFT + NETFLIX SEARCH Shift + Red / Netflix /
	REC MODE Rec / Rec Mode
	HOLD Stop / Hold
	SLOW Play / Slow

Original	Substituto
	STEP - FREEZE Pause / Step / Freeze
<< button"/>	TUNE- << / Tune-
>> button"/>	TUNE+ >> / Tune+
	PRESET- I<< / Preset-
>>I button"/>	PRESET+ >>I / Preset+

