



Original	Substituto
POWER	Power
INFO	Info / Angle
HDMI CONTROL	Smart / List
SLEEP	Sleep / Timer
SCREEN	Picture / Format
SOURCE	AV / Input / RDS
PRESETS	Setup / OPT /
1	1
2	2
3	3
ZOOM/RED/▲	Zoom / Size
ZOOM/RED/▲	Shift + CH+ /
ZOOM/RED/▲	Red / Netflix / Search
4	4
5	5
6	6
REPEAT/GREEN/▼	Shift + CH- / Page-

Original	Substituto
REPEAT/GREEN/▼	Green / APP / Repeat
7	7
8	8
9	9
ROOT/YELLOW	Yellow / YouTube / Repeat
RETURN	Back / Return
0	0
MENU	Menu / Home
TITLE/BUE	Sound / Title
TITLE/BUE	Blue / Prime Video / Random
UP	Up
LEFT	Left
OK/SELECT	OK
RIGHT	Right
DOWN	Down
P+	CH+ / Page+
P-	CH- / Page-





Original	Substituto
	V-
	V+
	FAV
	LANG
	SUBTITLE
	MUTE
	SWAP/↔
	EPG
	[*] / [··]
	TEXT
	C
	DISPLAY
	ANGLE
	SEARCH MODE
	REC
	STOP
	PLAY

Original	Substituto
	PAUSE
	<< / Tune-
	>> / Tune+
	I<< / Preset-
	>>I / Preset+
	Pause / Step / Freeze
	Vol-
	Vol+
	Fav / Marker / PC
	Audio / Lang I/II
	Subtitle / EQ
	Mute / Dimmer
	Shift + Back / Return
	Guide / EPG / -/-
	D.Menu / Top
	Text / Goto
	Exit / Cancel / Clear
	Display / Media
	Shift + Info / Angle
	Shift + Red / Netflix /
	Rec / Rec Mode
	Stop / Hold
	Play / Slow

