



| Original | Substituto     | Original | Substituto                  |
|----------|----------------|----------|-----------------------------|
|          | POWER          |          | Power                       |
|          | INFO           |          | Info / Angle                |
|          | HDMI CONTROL   |          | Smart / List                |
|          | SLEEP          |          | Sleep / Timer               |
|          | SCREEN         |          | Picture / Format            |
|          | SOURCE         |          | AV / Input / RDS            |
|          | PRESETS        |          | Setup / OPT /               |
|          | 1              |          | 1                           |
|          | 2              |          | 2                           |
|          | 3              |          | 3                           |
|          | ZOOM/RED/▲     |          | Zoom / Size                 |
|          | ZOOM/RED/▲     |          | Shift + CH+ /               |
|          | ZOOM/RED/▲     |          | Red / Netflix / Search      |
|          | 4              |          | 4                           |
|          | 5              |          | 5                           |
|          | 6              |          | 6                           |
|          | REPEAT/GREEN/▼ |          | Shift + CH- /               |
|          | REPEAT/GREEN/▼ |          | Green / APP / Repeat        |
|          | 7              |          | 7                           |
|          | 8              |          | 8                           |
|          | 9              |          | 9                           |
|          | ROOT/YELLOW    |          | Yellow / YouTube / Repeat   |
|          | RETURN         |          | Back / Return               |
|          | 0              |          | 0                           |
|          | MENU           |          | Menu / Home                 |
|          | TITLE/BLUE     |          | Sound / Title               |
|          | TITLE/BLUE     |          | Blue / Prime Video / Random |
|          | UP             |          | Up                          |
|          | LEFT           |          | Left                        |
|          | OK/SELECT      |          | OK                          |
|          | RIGHT          |          | Right                       |
|          | DOWN           |          | Down                        |
|          | P+             |          | CH+ / Page+                 |
|          | P-             |          | CH- / Page-                 |

Page-





| Original | Substituto                                     |
|----------|--|
|          | VOL - Vol-                                     |
|          | VOL + Vol+                                     |
|          | PC FAV MARKER Fav / Marker / PC                |
|          | LANG I/II Audio / Lang I/II                    |
|          | EQ SUBTITLE Subtitle / EQ                      |
|          | DIMMER MUTE Mute / Dimmer                      |
|          | SHIFT + RETURN BACK Shift + Back / Return      |
|          | GUIDE EPG Guide / EPG / -/-                    |
|          | TOP MENU D.MENU D.Menu / Top                   |
|          | GOTO TEXT Text / Goto                          |
|          | CLEAR EXIT CANCEL Exit / Cancel / Clear        |
|          | MEDIA DISPLAY Display / Media                  |
|          | SHIFT + ANGLE INFO Shift + Info / Angle        |
|          | SHIFT + NETFLIX SEARCH Shift + Red / Netflix / |
|          | REC MODE Rec / Rec Mode                        |
|          | HOLD Stop / Hold                               |
|          | SLOW Play / Slow                               |

| Original | Substituto                        |
|----------|-----------------------------------|
|          | STEP-FREEZE Pause / Step / Freeze |
|          | TUNE- << / Tune-                  |
|          | TUNE+ >> / Tune+                  |
|          | PRESET- I<< / Preset-             |
|          | PRESET+ >>I / Preset+             |

