



 









 









 


 

 




 


| Original | Substituto |
|----------|------------------------|
| | Power |
| | Info / Angle |
| | Smart / List |
| | Sleep / Timer |
| | Picture / Format |
| | AV / Input / RDS |
| | Setup / OPT / |
| | 1 |
| | 2 |
| | 3 |
| | Zoom / Size |
| | Shift + CH+ / |
| | Red / Netflix / Search |
| | 4 |
| | 5 |
| | 6 |
| | Shift + CH- / Page- |

| Original | Substituto |
|----------|-----------------------------|
| | Green / APP / Repeat |
| | 7 |
| | 8 |
| | 9 |
| | Yellow / YouTube / Repeat |
| | Back / Return |
| | 0 |
| | Menu / Home |
| | Sound / Title |
| | Blue / Prime Video / Random |
| | Up |
| | Left |
| | OK |
| | Right |
| | Down |
| | CH+ / Page+ |
| | CH- / Page- |





| Original | Substituto |
|---|---|
|  |  Vol- |
|  |  Vol+ |
|  |  Fav / Marker / PC |
|  |  Audio / Lang I/II |
|  |  Subtitle / EQ |
|  |  Mute / Dimmer |
|  |  Shift + Back / Return |
|  |  Guide / EPG / -/- |
|  |  D.Menu / Top |
|  |  Text / Goto |
|  |  Exit / Cancel / Clear |
|  |  Display / Media |
|  |  Shift + Info / Angle |
|  |  Shift + Red / Netflix / |
|  |  Rec / Rec Mode |
|  |  Stop / Hold |
|  |  Play / Slow |

| Original | Substituto |
|---|---|
|  |  Pause / Step / Freeze |
|  |  << / Tune- |
|  |  >> / Tune+ |
|  |  I<< / Preset- |
|  |  >>I / Preset+ |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

