

 



 














 
 
 
 



Original	Substituto	Original	Substituto
	POWER		Power
	INFO		Info / Angle
	HDMI CONTROL		Smart / List
	SLEEP		Sleep / Timer
	SCREEN		Picture / Format
	SOURCE		AV / Input / RDS
	PRESETS		Setup / OPT /
	1		1
	2		2
	3		3
	ZOOM/RED/▲		Zoom / Size
	ZOOM/RED/▲		Shift + CH+ /
	ZOOM/RED/▲		Red / Netflix / Search
	4		4
	5		5
	6		6
	REPEAT/GREEN/▼		Shift + CH- / Page-
	REPEAT/GREEN/▼		Green / APP / Repeat
	7		7
	8		8
	9		9
	ROOT/YELLOW		Yellow / YouTube / Repeat
	RETURN		Back / Return
	0		0
	MENU		Menu / Home
	TITLE/BBLUE		Sound / Title
	TITLE/BBLUE		Blue / Prime Video / Random
	UP		Up
	LEFT		Left
	OK/SELECT		OK
	RIGHT		Right
	DOWN		Down
	P+		CH+ / Page+
	P-		CH- / Page-

Page-





Original	Substituto
	VOL  Vol-
	VOL  Vol+
	PC  Fav / Marker / PC
	LANG  Audio / Lang I/II
	EQ  Subtitle / EQ
	DIMMER  Mute / Dimmer
	SHIFT  + RETURN  Shift + Back / Return
	GUIDE  Guide / EPG / -/--
	TOP MENU  D.Menu / Top
	GOTO  Text / Goto
	CLEAR  Exit / Cancel / Clear
	MEDIA  Display / Media
	SHIFT  + ANGLE  Shift + Info / Angle
	SHIFT  + NETFLIX  Shift + Red / Netflix /
	REC MODE  Rec / Rec Mode
	HOLD  Stop / Hold
	SLOW  Play / Slow

Original	Substituto
	STEP - FREEZE  Pause / Step / Freeze
	TUNE-  << / Tune-
	TUNE+  >> / Tune+
	PRESET-  I<< / Preset-
	PRESET+  >>I / Preset+

