












| Original | Substituto | Original | Substituto |
|---|------------|---|----------------------------|
|  | Power |  | Power |
|  | Mute |  | Mute / Dimmer |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | AV/Source |  | AV / Input / RDS |
|  | 0 |  | 0 |
|  | Exit |  | Exit / Cancel / Clear |
|  | -/-- |  | Shift + Guide / EPG / -/-- |
|  | CH+ |  | CH+ / Page+ |
|  | [i]/Info |  | Info / Angle |

| Original | Substituto | Original | Substituto |
|---|------------|---|-----------------------------|
|  | Vol+ |  | Vol+ |
|  | CH- |  | CH- / Page- |
|  | I-II |  | Audio / Lang I/II |
|  | Vol- |  | Vol- |
|  | Up |  | Up |
|  | Left |  | Left |
|  | OK/Select |  | OK |
|  | Right |  | Right |
|  | Menu |  | Menu / Home |
|  | Down |  | Down |
|  | TV/DTV |  | TV/Radio / |
|  | Red |  | Red / Netflix / Search |
|  | Green |  | Green / APP / Repeat |
|  | Yellow |  | Yellow / YouTube / Repeat |
|  | Blue |  | Blue / Prime Video / Random |
|  | [≡]/Text |  | Text / Goto |
|  | [≡o] |  | Sleep / Timer |





| Original | Substituto | Original | Substituto |
|---|---------------|---|--------------------|
|  | [≡+]/[X] |  | << / Tune- |
|  | [≡x]/[··] |  | >> / Tune+ |
|  | [.]/[*] |  | I<< / Preset- |
|  | [≡◆]/[+]/Wide |  | Picture / Format |
|  | [≡?] |  | >>I / Preset+ |
|  | [≡i]/Guide |  | Guide / EPG / -/-- |
|  | P<P/SWAP |  | Fav / Marker / PC |
|  | PP |  | Back / Return |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

