





















 

 



 



 



 



 



 

 

 


 
 









 



















Original	Substituto	Original	Substituto
 Standby	 Power	 Menu / EPG	 D.Menu / Top
 Auto / Eject	 Eject / Surround	 Menu / EPG	 Guide / EPG / -/-
 1	 1	 Ch+	 CH+ / Page+
 2	 2	 Vol-	 Vol-
 3	 3	 FAV	 Fav / Marker / PC
 4	 4	 Ch-	 CH- / Page-
 5	 5	 Up	 Up
 6	 6	 Left	 Left
 7	 7	 Enter	 OK
 8	 8	 Right	 Right
 9	 9	 LCD Menu / Exit	 Menu / Home
 0	 0	 Down	 Down
 Tv / Radio	 TV/Radio /	 DVD Setup / Exit	 Setup / OPT /
 Recall	 Back / Return	 DVD Setup / Exit	 Shift + Exit / Cancel / Clear
 Vol+	 Vol+	 Input	 AV / Input / RDS
 Title / Pr List	 Shift +  Sound / Title	 P.Mode	 Picture / Format
 Title / Pr List	 Smart / List	 S.Mode	 Sound / Title





Original	Substituto
 MUTE	 Mute / Dimmer
 Play / Pause	 Play / Slow
 Play / Pause	 Pause / Step / Freeze
 Exit / Stop	 Exit / Cancel / Clear
 Exit / Stop	 Stop / Hold
 Sleep	 Sleep / Timer
 Audio	 Audio / Lang I/II
 <<<	 <<< / Tune-
 >>>	 >>> / Tune+
 Zoom	 Zoom / Size
 Subpage / Goto	 Text / Goto
 Index / I<<<	 I<<< / Preset-
 Size / >>>I	 Shift + Zoom /
 Size / >>>I	 >>>I / Preset+
 Reveal	 Display / Media
 Subtitle	 Subtitle / EQ
 Red / Mode	 Red / Netflix / Search

Original	Substituto
 Green / Clear	 Green / APP / Repeat
 Yellow / Repeat	 Yellow / YouTube / Repeat
 Yellow / Repeat	 Shift + Green / APP /
 Blue / AB	 Blue / Prime Video / Random
 Blue / AB	 Shift + Yellow / YouTube /

