



Original	Substituto	Original	Substituto
 Power	 Power	 Display	 WIDE
 Mute	 MUTE	 Source	 SRC
 1	 1	 Enter	 OK
 2	 2	 FAV/List	 P/C / FAV
 3	 3	 Rec	 Rec
 4	 4	 Freeze	 Pause
 5	 5	 MTS	 INFO
 6	 6	 <<	 Rewind
 7	 7	 Guide	 -/-- / EPG
 8	 8	 >>/Aspect	 Fast Forward
 9	 9	 I<</Cancel	 First
 0	 0	 >>I/Sub.PG	 Last
 DTV/ATV	 VOD	 Stop/Index	 Stop
 Recall	 BACK	 Play/Pause/Timeshift	 Play
 Sleep	 MEDIA	 Tv/Radio	 TV/R
 Menu	 MENU	 Subtitle	 Subt.
 Exit	 EXIT	 Reveal	 OPT+



