








 
 








 



 




 







 














| Original  | Substituto | Original  | Substituto       |
|---|------------|---|------------------|
|    | Power      |    | Power            |
|    | Mute       |    | Mute / Dimmer    |
|    | 1          |    | 1                |
|    | 2          |    | 2                |
|    | 3          |    | 3                |
|    | 4          |    | 4                |
|    | 5          |    | 5                |
|    | 6          |    | 6                |
|    | 7          |    | 7                |
|   | 8          |   | 8                |
|  | 9          |  | 9                |
|  | 0          |  | 0                |
|  | DTV/ATV    |  | D.Menu / Top     |
|  | Recall     |  | Back / Return    |
|  | P.Mode     |  | Picture / Format |
|  | S.Mode     |  | Sound / Title    |
|  | Sleep      |  | Sleep / Timer    |














 


| Original  | Substituto | Original  | Substituto            |
|---|------------|---|-----------------------|
|    | Menu       |    | Menu / Home           |
|    | Source     |    | AV / Input / RDS      |
|    | Up         |    | Up                    |
|    | Left       |    | Left                  |
|    | Enter      |    | OK                    |
|    | Right      |    | Right                 |
|    | Down       |    | Down                  |
|    | Exit       |    | Exit / Cancel / Clear |
|    | Display    |    | Display / Media       |
|   | Vol+       |   | Vol+                  |
|  | Vol-       |  | Vol-                  |
|  | MTS        |  | Info / Angle          |
|  | Rec List   |  | Smart / List          |
|  | CH+        |  | CH+ / Page+           |
|  | CH-        |  | CH- / Page-           |
|  | FAV/List   |  | Fav / Marker / PC     |
|  | Rec        |  | Rec / Rec Mode        |







| Original  | Substituto |
|---|------------|
|    | Power      |
|    | Mute       |
|    | 1          |
|    | 2          |
|    | 3          |
|    | 4          |
|    | 5          |
|    | 6          |
|    | 7          |
|    | 8          |
|  | 9          |
|  | 0          |
|  | DTV/ATV    |
|  | Recall     |
|  | P.Mode     |
|  | S.Mode     |
|  | Sleep      |

| Original  | Substituto |
|---|------------|
|    | Menu       |
|    | Source     |
|    | Up         |
|    | Left       |
|    | Enter      |
|    | Right      |
|    | Down       |
|    | Exit       |
|    | Display    |
|    | Vol+       |
|  | Vol-       |
|  | MTS        |
|  | Rec List   |
|  | CH+        |
|  | CH-        |
|  | FAV/List   |
|  | Rec        |



