



Original	Substituto	Original	Substituto
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	DTV/ATV		D.Menu / Top
	Recall		Back / Return
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Sleep		Sleep / Timer

Original	Substituto	Original	Substituto
	Menu		Menu / Home
	Source		AV / Input / RDS
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Exit		Exit / Cancel / Clear
	Display		Display / Media
	Vol+		Vol+
	Vol-		Vol-
	MTS		Info / Angle
	Rec List		Smart / List
	CH+		CH+ / Page+
	CH-		CH- / Page-
	FAV/List		Fav / Marker / PC
	Rec		Rec / Rec Mode














 
 








 



 




 

Original	Substituto	Original	Substituto
Freeze	Pause / Step / Freeze	Green	Green / APP / Repeat
Guide	Guide / EPG / -/--	Yellow	Yellow / YouTube / Repeat
<<	<< / Tune-	Cyan	Blue / Prime Video / Random
>> / Aspect	>> / Tune+		
>> / Aspect	Shift + Picture / Format		
I<< / Cancel	I<< / Preset-		
I<< / Cancel	Shift + Exit / Cancel / Clear		
>>I / Sub.PG	>>I / Preset+		
Stop / Index	Stop / Hold		
Play/Pause / Timeshift	Play / Slow		
Tv/Radio	TV/Radio /		
Subtitle	Subtitle / EQ		
Reveal	Eject / Surround		
Size	Zoom / Size		
Hold	Shift + Stop /		
Text	Text / Goto		
Red	Red / Netflix / Search		















 














 


Original	Substituto	Original	Substituto
Green	Green / APP / Repeat	Yellow	Yellow / YouTube / Repeat
Cyan	Blue / Prime Video / Random		
















Original	Substituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 DTV/ATV	 D.Menu / Top
 Recall	 Back / Return
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Sleep	 Sleep / Timer

Original	Substituto
 Menu	 Menu / Home
 Source	 AV / Input / RDS
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Display	 Display / Media
 Vol+	 Vol+
 Vol-	 Vol-
 MTS	 Info / Angle
 Rec List	 Smart / List
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 FAV/List	 Fav / Marker / PC
 Rec	 Rec / Rec Mode





Original	Substituto	Original	Substituto
 Freeze	 Pause / Step / Freeze	 Green	 Green / APP / Repeat
 Guide	 Guide / EPG / -/-	 Yellow	 Yellow / YouTube / Repeat
 <<	 << / Tune-	 Cyan	 Blue / Prime Video / Random
 >> / Aspect	 >> / Tune+		
 >> / Aspect	 Shift + Picture / Format		
 I<< / Cancel	 I<< / Preset-		
 I<< / Cancel	 Shift + Exit / Cancel / Clear		
 >>I / Sub.PG	 >>I / Preset+		
 Stop / Index	 Stop / Hold		
 Play/Pause / Timeshift	 Play / Slow		
 Tv/Radio	 TV/Radio /		
 Subtitle	 Subtitle / EQ		
 Reveal	 Eject / Surround		
 Size	 Zoom / Size		
 Hold	 Shift + Stop /		
 Text	 Text / Goto		
 Red	 Red / Netflix / Search		

Original	Substituto
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Cyan	 Blue / Prime Video / Random

