



 









 

 

 





 

 

 
 


Original	Substituto	Original	Substituto
 Power	 Power	 CEC	CEC
 1	 1	 ?	?
 2	 2	 EXIT	Exit
 3	 3	 MENU	Menu
 4	 4	 Up	Up
 5	 5	 BACK	Back / Return
 6	 6	 Left	Left
 7	 7	 OK	OK
 8	 8	 Right	Right
 9	 9	 Down	Down
 FAV	 Fav / Marker / PC	 GUIDE	Guide
 0	 0	 TOOLS	Tools
 TXT	 Text / Goto	 Vol+	Vol+
 Red	 Red / Netflix / Search	 Source	AV / Input / RDS
 Green	 Green / APP / Repeat	 PR+	CH+ / Page+
 Yellow	 Yellow / YouTube / Repeat	 Vol-	Vol-
 Blue	 Blue / Prime Video / Random	 Mute	Mute / Dimmer

Original	Substituto	Original	Substituto
 Smart / List	 Smart / List	 TV	TV
 D.Menu / Top	 D.Menu / Top	 DVD	DVD
 Exit / Cancel / Clear	 Exit / Cancel / Clear	 SAT	SAT
 Menu / Home	 Menu / Home	 AUX	AUX
 Up	 Up	 SLOW	SLOW
 Back / Return	 Back / Return	 STEP-FREEZE	STEP-FREEZE
 Left	 Left	 HOLD	HOLD
 OK	 OK	 REC MODE	REC MODE
 Right	 Right	 TUNE-	TUNE-
 Down	 Down	 TUNE+	TUNE+
 Guide / EPG / -/-	 Guide / EPG / -/-	 PRESET-	PRESET-
 Vol+	 Vol+	 PRESET+	PRESET+
 Source	 Source	 TITLE	TITLE
 PR+	 PR+	 LANG UI	LANG UI
 Vol-	 Vol-	 EQ	EQ
 Mute / Dimmer	 Mute / Dimmer	 SURROUND	SURROUND





Original	Substituto	Original	Substituto
	PR-		CH- / Page-
	I<		I<< / Preset-
	>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	[<>]		Picture / Format
	Dialog		Audio / Lang I/II
	[...]		Subtitle / EQ
	Tv/Radio		TV/Radio /
	My Media		Display / Media

