


 
 
 
 
 
 
 

 
 
 
 
 
 
 
 
 
 
 










 


 


 

 

 

 

 






 








 

 


 





Original	Substituto	Original	Substituto
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Source		AV
	ATV/DTV/Content Menu		Smart
	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +
	P-		Ch -
	Mute		Mute
	Guide/Top		Media
	Exit/Return		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Menu/DVD		Menu
	Tv/FAV/Radio/Set		TV/R
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	[<>]		Format
	Subtitle		3D
	Subtitle		Subt

 






 


 
 
 

 
 
 

 

 
 
 
 

 

 

 
 
 
 

 
 
 

 

 
 


 


 
 







 

 

 

 
 
 

 





	Original	Substituto		Original	Substituto
	Text	 Text			
	II/II>/[▼]	 Pause			
	[i+]/[≡i]	 Info			
	O)I/II	 Dual			
	Stop	 Stop			
	Play/[≡o]	 Play			
	Eject	 Eject			
	I<</[≡?]	 I<<			
	<</[≡+]	 <<			
	>>/[≡◇]	 >>			
	>>I/[O]/[≡X]	 >>I			
	AD	 +  Shift + Subt			
	Audio	 +  Shift + Dual			





Original		Substituto		Original		Substituto	
	←[/]→		3D		Menu/DVD		Menu
	Power		Power		Tv/FAV/Radio/Set		TV/R
	1		1		Guide/Top		Guide
	2		2		[<>]		Format
	3		3		Text		Text
	4		4		Subtitle		Subt
	5		5		O) /II		Dual
	6		6		[i+]/[≡i]		Info
	7		7		OK		Ok
	8		8		Up		Up
	9		9		Down		Down
	0		0		Right		Right
	Source		AV		Left		Left
	Mute		Mute		/ >/[▼]		Pause
	Vol+		Vol +		Play/[≡o]		Play
	Vol-		Vol -		Stop		Stop
	Exit/Return		Exit		Eject		Eject



 
 


 
 
 

 

 

 

 

 
 
 

 

 

 





 




 

 

 




 
 
 

 
 

 

 
 
 
 
 


 
 
 
 






	Original	Substituto	Original	Substituto
	<</[≡?]	 <<		
	<</[≡+]	 <<		
	>>/[≡◇]	 >>		
	>> /[O]/[≡X]	 >>		
	Audio	 +  Shift + Dual		





Original	Substituto	Original	Substituto
	Power		Power
	←[/]→		3D
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Source		AV
	ATV/DTV/Content Menu		Smart
	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +
	P-		Ch -
	Mute		Mute
	Guide/Top		Guide
	Exit/Return		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Menu/DVD		Menu
	Tv/FAV/Radio/Set		TV/R
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Text		Text
	[<>]		Format





Original	Substituto
[i+]/[≡i]	DISPLAY INFO Info
II/II>/[▼]	II Pause
SUBTITLE Subtitle	AD SUBT Subt
CD/DVD O)/II	SOUND DUAL Dual
Play/[≡o]	PLAY MODE Play
Stop	Stop
Eject	ZOOM Eject
I<</[≡?]	I<<
<</[≡+]	<<
>>/[≡◇]	>>
>>I/[O]/[≡X]	>>I
Audio	SHIFT + SOUND DUAL Shift + Dual
AD	SHIFT + AD SUBT Shift + Subt

Original	Substituto

