




Original	Substituto	Original	Substituto
	Power		Power
	Mute		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	AD/Subt		Subtitle / EQ
	P.Size		Zoom / Size
	E-Manual		D.Menu / Top
	Tools		Setup / OPT /
	TTX/MIX		Text / Goto
	Source		AV / Input / RDS
	Menu		Menu / Home
	Up		Up

Original	Substituto	Original	Substituto
	Info		Info / Angle
	Left		Left
	Enter		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	PRE-CH		Back / Return
	Vol+		Vol+
	CH List		Smart / List
	PR+		CH+ / Page+
	Vol-		Vol-
	Media.P		Display / Media
	PR-		CH- / Page-
	1		1
	2		2
	3		3
	4		4





Original		Substituto	
<b>5</b>	5	<b>TAPE</b> 5	5
<b>6</b>	6	<b>TUNER</b> 6	6
<b>7</b>	7	<b>AUX - HDD</b> 7	7
<b>8</b>	8	<b>USB</b> 8	8
<b>9</b>	9	<b>BLUETOOTH</b> 9	9
<b>GUIDE</b>	Guide	<b>GUIDE EPG</b> -/--	Guide / EPG / -/--
<b>0</b>	0	<b>HDMI - SAT</b> 0	0
<b>A</b>	Red/A	<b>NETFLIX SEARCH</b>	Red / Netflix / Search
<b>B</b>	Green/B	<b>APP REPEAT</b>	Green / APP / Repeat
<b>C</b>	Yellow/C	<b>YouTube REPEAT A-B</b>	Yellow / YouTube / Repeat
<b>D</b>	Blue/D	<b>Prime Video RANDOM</b>	Blue / Prime Video / Random
<b>RETURN</b>	Return	<b>SHIFT</b> + <b>RETURN BACK</b>	Shift + Back / Return

Original		Substituto	

