

 



 

 



 







 





 



 








 



 
 









 



 




 
 










Original	Substituto	Original	Substituto
 Power	 Power	 PR+	 CH+ / Page+
 TV	 Display / Media	 PR-	 CH- / Page-
 1	 1	 Source	 AV / Input / RDS
 2	 2	 Info	 Info / Angle
 3	 3	 Menu	 Menu / Home
 4	 4	 Guide	 Guide / EPG / -/--
 5	 5	 Tools	 Setup / OPT /
 6	 6	 Return	 Back / Return
 7	 7	 Up	 Up
 8	 8	 Down	 Down
 9	 9	 Right	 Right
 0	 0	 Left	 Left
 PRE-CH	 Shift + Fav / Marker / PC	 Enter	 OK
 Vol+	 Vol+	 CH List	 Smart / List
 FAV.CH	 Fav / Marker / PC	 Exit	 Exit / Cancel / Clear
 Vol-	 Vol-	 Red	 Red / Netflix / Search
 Mute	 Mute / Dimmer	 Green	 Green / APP / Repeat

Original	Substituto	Original	Substituto
 Power	 Dimmer / Mute	 SHIFT	
 TV	 DVD	 SAT	 AUX
 SLOW	 STEP-FREEZE	 HOLD	 REC MODE
 TUNE-	 TUNE+	 PRESET-	 PRESET+
 TITLE	 LANG UII	 EQ	 SURROUND
 SOUND	 AUDIO	 SUBTITLE	 PROGRAM
 FORMAT	 SIZE	 TIMER	 TV RADIO
 PICTURE	 ZOOM	 SLEEP	 RDS
 TOP MENU	 OPT-TOOLS	 GOTO	 AV INPUT
 D.MENU	 SETUP	 TEXT	 HOME
 HOME	 ANGLE	 MENU	 INFO
 OK	 Up	 Down	 Left
 EXIT	 RETURN	 Right	 LIST
 CANCEL	 SMART	 CH PAGE	 MEDIA
 VOL+	 DISPLAY	 TV	 DVD
 VOL-	 CD - STB	 1	 2
 TV	 TAPE	 3	 TUNER
 1	 USB	 4	 5
 2	 BLUETOOTH	 6	 7
 3	 AUX - HDD	 8	 8
 4	 HDMI - BAT	 9	 9
 5	 PC	 GUIDE EPG	 0
6	FAV MARKER	NETFLIX	APP
7	SEARCH	REPEAT	REPEAT A-B
8	RANDOM	Mandis SHOP	www.mandis.tv



