

 



 

 



 






 





 



 








 



 
 









 



 




 
 








Original	Substituto	Original	Substituto
 Power	 Power	 PR+	 CH+ / Page+
 TV	 Display / Media	 PR-	 CH- / Page-
 1	 1	 Source	 AV / Input / RDS
 2	 2	 Info	 Info / Angle
 3	 3	 Menu	 Menu / Home
 4	 4	 Guide	 Guide / EPG / -/--
 5	 5	 Tools	 Setup / OPT /
 6	 6	 Return	 Back / Return
 7	 7	 Up	 Up
 8	 8	 Down	 Down
 9	 9	 Right	 Right
 0	 0	 Left	 Left
 PRE-CH	 Shift + Fav / Marker / PC	 Enter	 OK
 Vol+	 Vol+	 CH List	 Smart / List
 FAV.CH	 Fav / Marker / PC	 Exit	 Exit / Cancel / Clear
 Vol-	 Vol-	 Red	 Red / Netflix / Search
 Mute	 Mute / Dimmer	 Green	 Green / APP / Repeat

Original	Substituto	Original	Substituto
 POWER	 DIMMER MUTE	 SHIFT	
 TV	 DVD	 SAT	 AUX
 SLOW	 STEP-FREEZE	 HOLD	 REC MODE
 TUNE-	 TUNE+	 PRESET-	 PRESET+
 TITLE	 LANG UI	 EQ	 SURROUND
 SOUND	 AUDIO	 SUBTITLE	 PROGRAM
 FORMAT	 SIZE	 TIMER	 TV RADIO
 PICTURE	 ZOOM	 SLEEP	 RDS
 TOP MENU	 OPT-TOOLS	 GOTO	 AV INPUT
 D.MENU	 SETUP	 TEXT	 HOME
 HOME	 ANGLE	 MENU	 INFO
 CLEAR	 EXIT	 CANCEL	 RETURN
 LIST	 SMART	 MEDIA	 CH PAGE
 TV	 DVD	 CD - STB	
 VIDEO	 TAPE	 TUNER	
 AUX - HDD	 USB	 BLUETOOTH	
 GUIDE EPG	 HDMI - BAT	 PC	
 NETFLIX	 APP	 YouTube	 Prime Video
 SEARCH	 REPEAT	 REPEAT A-B	 RANDOM





Original	Substituto
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
TTX/MIX	Text / Goto
AD	Audio / Lang I/II
SUBT.	Subtitle / EQ

Original	Substituto

