

 





 







 



 





 

 



 



 



 



 



 











 









 


 

 

 

 


Original	Substituto	Original	Substituto
 Power	 Power	 Index	 D.Menu / Top
 Mute	 Mute / Dimmer	 Recall	 Setup / OPT /
 Play	 Play / Slow	 Text	 Text / Goto
 Pause	 Pause / Step / Freeze	 AV/Source	 AV / Input / RDS
 Stop	 Stop / Hold	 Menu	 Menu / Home
 Rec	 Rec / Rec Mode	 Up	 Up
 <<	 << / Tune-	 i/Info	 Info / Angle
 >>	 >> / Tune+	 Left	 Left
 I<<	 I<< / Preset-	 OK	 OK
 >>I	 >>I / Preset+	 Right	 Right
 S.Mode	 Sound / Title	 Exit	 Exit / Cancel / Clear
 Audio	 Audio / Lang I/II	 Down	 Down
 Subtitle	 Subtitle / EQ	 Back	 Back / Return
 P.Mode	 Picture / Format	 Vol+	 Vol+
 Size	 Zoom / Size	 Rec List	 Smart / List
 Sleep	 Sleep / Timer	 CH+	 CH+ / Page+
 Tv/Radio	 TV/Radio /	 Vol-	 Vol-





Original		Substituto	
	ATV		Display / Media
	CH-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Tv Guide		Guide / EPG / -/--
	0		0
	FAV		Fav / Marker / PC
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat

Original		Substituto	
	Blue		Blue / Prime Video / Random
	Power/Display		Shift + Power
	Hold		Shift + Stop /
	Aspect		Shift + Picture / Format
	USB		Shift + 8

