























 



 

 



 

 



 



 



 



 

 



 



 









Original	Substituto	Original	Substituto
 Power	 Power	 9	 9
 PRO/TV/TXT	 TV/Radio /	 FAV	 Fav / Marker / PC
 Slow/Cancel	 Shift + Play /	 0	 0
 Rep/Reveal	 Shift + Back / Return	 Recall	 Back / Return
 TV/AV	 AV / Input / RDS	 Vol+	 Vol+
 <</Hold	 << / Tune-	 CH+	 CH+ / Page+
 >>/Size	 >> / Tune+	 Up	 Up
  <</Subpage	  << / Preset-	 Left	 Left
 >> /Index	 >>  / Preset+	 OK	 OK
 1	 1	 Right	 Right
 2	 2	 Vol-	 Vol-
 3	 3	 Down	 Down
 4	 4	 CH-	 CH- / Page-
 5	 5	 Menu	 Menu / Home
 6	 6	 Exit	 Exit / Cancel / Clear
 7	 7	 Nicam/A2	 Text / Goto
 8	 8	 Display	 Display / Media



