



 



 

 


 

 


 
 










Original	Substituto	Original	Substituto
	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide
	Recall		Pre Ch
	Source		AV
	Sound	 + 	Shift + Dual
	Picture		Format

Original	Substituto	Original	Substituto
	Audio 1/2		Dual
	Vol+		Vol +
	Vol-		Vol -
	Menu		Menu
	Sleep		Sleep
	CH+		Ch +
	CH-		Ch -
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Index		Back





Original	Substituto	Original	Substituto
TEXT	Text	REPEAT TEXT	Text
LIST	List	DISC NAV LIST	List
HOLD	Hold	HOME SMART	Smart
SUBTITLE	Subtitle	AD SUBT	Subt
INFO	Info	DISPLAY INFO	Info
CANCEL	Cancel	CLEAR EXIT	Exit
REVEAL	Reveal	SEARCH TV/R	TV/R
ZOOM	Zoom	ZOOM ▲	Eject

Original	Substituto

