

















 



 

 





 
 






Original	Substituto
 Power	 Power
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 TTX/MIX	 Text / Goto
 PRE_CH	 Back / Return
 Mute	 Mute / Dimmer
 CH List	 Shift + Smart / List
 Vol+	 Vol+

Original	Substituto
 Vol-	 Vol-
 PR+	 CH+ / Page+
 PR-	 CH- / Page-
 Menu	 Menu / Home
 Guide	 Guide / EPG / -/-
 Tools	 Setup / OPT /
 Exit	 Exit / Cancel / Clear
 Return	 Shift + Back / Return
 Smart HUB	 Smart / List
 Info	 Info / Angle
 OK	 OK
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Red/A	 Red / Netflix / Search
 Green/B	 Green / APP / Repeat





Original	Substituto	Original	Substituto
 Yellow/C	 Yellow / YouTube / Repeat		
 Blue/D	 Blue / Prime Video / Random		
 ADJ/SUBT	 Subtitle / EQ		
 P.Size	 Zoom / Size		
 E-Manual	 D.Menu / Top		
 Social TV	 Shift + Green / APP /		
 Search	 Shift + Red / Netflix /		
 Play	 Play / Slow		
 3D	 Display / Media		
 Stop	 Stop / Hold		
 Pause	 Pause / Step / Freeze		
 << / <<<	 << / Tune-		
 >> / >>	 >> / Tune+		
 Rec	 Rec / Rec Mode		

Original	Substituto

