

















 



 

 





 
 


 

 



 

 

 

 



 

 

 



 



 



 
 




| Original | Substituto | Original | Substituto |
|---|--|---|--|
|  Power |  Power |  Vol- |  Vol- |
|  Source |  AV / Input / RDS |  PR+ |  CH+ / Page+ |
|  1 |  1 |  PR- |  CH- / Page- |
|  2 |  2 |  Menu |  Menu / Home |
|  3 |  3 |  Guide |  Guide / EPG / -/- |
|  4 |  4 |  Tools |  Setup / OPT / |
|  5 |  5 |  Exit |  Exit / Cancel / Clear |
|  6 |  6 |  Return |  Shift + Back / Return |
|  7 |  7 |  Smart HUB |  Smart / List |
|  8 |  8 |  Info |  Info / Angle |
|  9 |  9 |  OK |  OK |
|  0 |  0 |  Up |  Up |
|  TTX/MIX |  Text / Goto |  Down |  Down |
|  PRE_CH |  Back / Return |  Right |  Right |
|  Mute |  Mute / Dimmer |  Left |  Left |
|  CH List |  Shift + Smart / List |  Red/A |  Red / Netflix / Search |
|  Vol+ |  Vol+ |  Green/B |  Green / APP / Repeat |

| Original | Substituto | Original | Substituto |
|---|--|---|--|
|  Power |  Power |  Vol- |  Vol- |
|  Source |  AV / Input / RDS |  PR+ |  CH+ / Page+ |
|  1 |  1 |  PR- |  CH- / Page- |
|  2 |  2 |  Menu |  Menu / Home |
|  3 |  3 |  Guide |  Guide / EPG / -/- |
|  4 |  4 |  Tools |  Setup / OPT / |
|  5 |  5 |  Exit |  Exit / Cancel / Clear |
|  6 |  6 |  Return |  Shift + Back / Return |
|  7 |  7 |  Smart HUB |  Smart / List |
|  8 |  8 |  Info |  Info / Angle |
|  9 |  9 |  OK |  OK |
|  0 |  0 |  Up |  Up |
|  TTX/MIX |  Text / Goto |  Down |  Down |
|  PRE_CH |  Back / Return |  Right |  Right |
|  Mute |  Mute / Dimmer |  Left |  Left |
|  CH List |  Shift + Smart / List |  Red/A |  Red / Netflix / Search |
|  Vol+ |  Vol+ |  Green/B |  Green / APP / Repeat |



