




Original	Substituto	Original	Substituto
	Power		Power
	Portal/Energy Saving		Sleep / Timer
	[]/Ratio		Picture / Format
	Input		AV / Input / RDS
	TV		TV/Radio /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	List		Smart / List
	0		0
	Q.View		D.Menu / Top

Original	Substituto	Original	Substituto
	Vol+		Vol+
	Fav		Fav / Marker / PC
	PR+/Page Up		CH+ / Page+
	Vol-		Vol-
	3D		Zoom / Size
	PR-/Page Down		CH- / Page-
	Mute		Mute / Dimmer
	Settings		Setup / OPT /
	Info/Home		Info / Angle
	Q.Menu/3D		Menu / Home
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Back		Back / Return
	Guide		Guide / EPG / -/-

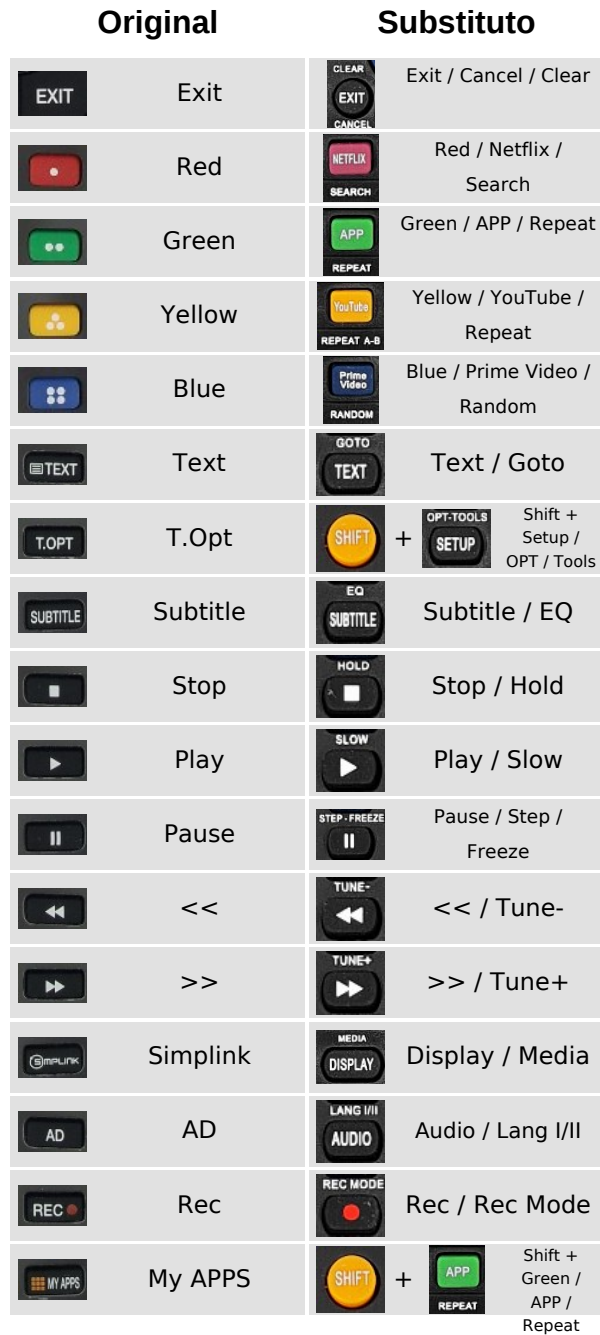



The image shows a black Mandis TV remote control. At the top, there are four buttons: a red power button, a black 'DIMMER MUTE' button, and a yellow 'SHIFT' button. Below these are four blue buttons labeled 'TV', 'DVD', 'SAT', and 'AUX'. The main body of the remote contains a grid of buttons for various functions such as 'SLOW', 'STEP-FREEZE', 'HOLD', 'REC MODE', 'TUNE-', 'TUNE+', 'PRESET-', 'PRESET+', 'TITLE', 'LANG I/II', 'EQ', 'SURROUND', 'SOUND', 'AUDIO', 'SUBTITLE', 'FORMAT', 'SIZE', 'TIMER', 'PROGRAM', 'PICTURE', 'ZOOM', 'SLEEP', 'TV/RADIO', 'TOP MENU', 'OPT-TOOLS', 'GOTO', 'RDS', 'D.MENU', 'SETUP', 'TEXT', and 'AV INPUT'. In the center is a navigation pad with four blue directional buttons (up, down, left, right) and a central 'OK' button. To the left of the pad are 'CLEAR', 'EXIT', and 'CANCEL' buttons, and to the right are 'RETURN' and 'BACK' buttons. Below the navigation pad is a 'LIST' button, followed by 'SMART', 'MEDIA', and 'DISPLAY' buttons. To the left of these is a large '+' button labeled 'VOL' and a '-' button. To the right is a large '+' button labeled 'CH PAGE' and a '-' button. Below these are two rows of numeric buttons (1-9 and 0). At the bottom, there are four colored buttons: 'NETFLIX' (red), 'APP' (green), 'YouTube' (yellow), and 'Prime Video' (blue). Below these are four more buttons: 'SEARCH', 'REPEAT', 'REPEAT A-B', and 'RANDOM'. The 'Mandis' logo and 'shop' tagline are printed at the bottom, along with the website 'www.mandis.tv'.