



Original	Substituto	Original	Substituto
	Power		Power
	Portal/Energy Saving		Sleep / Timer
	[]/Ratio		Picture / Format
	Input		AV / Input / RDS
	TV		TV/Radio /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	List		Smart / List
	0		0
	Q.View		D.Menu / Top

Original	Substituto	Original	Substituto
	Vol+		Vol+
	Fav		Fav / Marker / PC
	PR+/Page Up		CH+ / Page+
	Vol-		Vol-
	3D		Zoom / Size
	PR-/Page Down		CH- / Page-
	Mute		Mute / Dimmer
	Settings		Setup / OPT /
	Info/Home		Info / Angle
	Q.Menu/3D		Menu / Home
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Back		Back / Return
	Guide		Guide / EPG / -/-





Original	Substituto	Original	Substituto
EXIT	Exit	CLEAR	Exit / Cancel / Clear
Red	Red	NETFLIX	Red / Netflix / Search
Green	Green	APP	Green / APP / Repeat
Yellow	Yellow	YouTube	Yellow / YouTube / Repeat
Blue	Blue	Prime Video	Blue / Prime Video / Random
TEXT	Text	GOTO	Text / Goto
T.OPT	T.Opt	SHIFT + OPT-TOOLS	Shift + Setup / OPT / Tools
SUBTITLE	Subtitle	EQ	Subtitle / EQ
Stop	Stop	HOLD	Stop / Hold
Play	Play	SLOW	Play / Slow
Pause	Pause	STEP-FREEZE	Pause / Step / Freeze
<<	<<	TUNE-	<< / Tune-
>>	>>	TUNE+	>> / Tune+
Simplink	Simplink	MEDIA DISPLAY	Display / Media
AD	AD	LANG I/II	Audio / Lang I/II
REC	Rec	REC MODE	Rec / Rec Mode
MY APPS	My APPS	SHIFT + APP	Shift + Green / APP / Repeat

