 







 
 




 


 

 


 




 
 






 
 

 






Original	Substituto	Original	Substituto
	Power		Power
	Sleep		Sleep / Timer
	Screen		Picture / Format
	Presets		Setup / OPT /
	↔		TV/Radio /
	FAV		Shift + Fav / Marker / PC
	Lang		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	TXT		Text / Goto
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	EPG		Guide / EPG / -/-
	0		0
	Swap		Fav / Marker / PC
	Photo/Music/Movi		D.Menu / Top
	World		Smart / List
	Source		AV / Input / RDS
	Menu		Menu / Home
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	C		Exit / Cancel / Clear
	Disp.		Display / Media
	Search Mode		Shift + Red / Netflix /
	Return		Back / Return





	Original	Substituto		Original	Substituto
	CH+	CH+ / Page+		Yellow/Root	Yellow / YouTube / Repeat
	Info	INFO / Angle		Blue/Title	Blue / Prime Video / Random
	Vol+	Vol+			
	CH-	CH- / Page-			
	Mute	Mute / Dimmer			
	Vol-	Vol-			
	Rec	Rec / Rec Mode			
	Pause	Pause / Step / Freeze			
	I<<	I<< / Preset-			
	>>I	>>I / Preset+			
	<<	<< / Tune-			
	Play	Play / Slow			
	Stop	Stop / Hold			
	>>	>> / Tune+			
	Red/↑/Zoom	Red / Netflix / Search			
	Red/↑/Zoom	Zoom / Size			
	Green/↓/Repeat	Green / APP / Repeat			

