



Original	Substituto	Original	Substituto
	Power		Power
	Mute		Mute
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK/Select		Ok
	M		Menu
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide
	Exit		Exit
	P<P/Swap		Pre Ch
	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +
	P-		Ch -
	PP		Eject
	I-II		Dual
	Tv/DTV		TV/R
	[≡]		Text
	[≡0]		Options
	AV/Source		AV
	[≡+]/[X]		Format
	[≡X]/[■]		3D
	[.≡]/[■]		Subt





Original	Substituto
[≡◇]	MEDIA Media
[≡?]	RETURN BACK Back
[≡i]	DISPLAY INFO Info
Red/[+]/Wide/↑	A Red
Green/↓	B Green
Yellow	C Yellow
Blue/Guide	D Blue
[i]	E-MANUAL D.MENU D. Menu

Original	Substituto

