



| Original | Substituto |
|----------|----------------------------|
| Power | Power |
| Netflix | + Shift + Red / Netflix / |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |
| TV | TV/Radio / |
| 0 | 0 |
| Recall | Fav / Marker / PC |
| Vol+ | Vol+ |
| Mute | Mute / Dimmer |
| PR+ | CH+ / Page+ |

| Original | Substituto |
|-----------------|-----------------------|
| Vol- | Vol- |
| i | Info / Angle |
| PR- | CH- / Page- |
| Menu | Menu / Home |
| Up | Up |
| Q.Menu | D.Menu / Top |
| Left | Left |
| OK | OK |
| Right | Right |
| Back | Back / Return |
| Down | Down |
| EXit | Exit / Cancel / Clear |
| World | Smart / List |
| Camera/Music/Ph | Display / Media |
| Guide | Guide / EPG / -/-- |
| */o | Picture / Format |
| Games | AV / Input / RDS |





| Original | Substituto | Original | Substituto |
|----------|---|----------|------------|
| [=]/Text | GOTO TEXT Text / Goto | | |
| Red | NETFLIX SEARCH Red / Netflix / Search | | |
| Green | APP REPEAT Green / APP / Repeat | | |
| Yellow | YouTube REPEAT A-B Yellow / YouTube / Repeat | | |
| Blue | Prime Video RANDOM Blue / Prime Video / Random | | |
| Lang | LANG I/II AUDIO Audio / Lang I/II | | |
| [=].. | EQ SUBTITLE Subtitle / EQ | | |
| [-O-] | SIZE ZOOM Zoom / Size | | |
| << | TUNE- << / Tune- | | |
| | STEP-FREEZE Pause / Step / Freeze | | |
| >> | TUNE+ >> / Tune+ | | |
| Rec | REC MODE Rec / Rec Mode | | |
| ▶ | SLOW ▶ Play / Slow | | |
| ■ | HOLD ■ Stop / Hold | | |
| | | | |
| | | | |
| | | | |
| | | | |

