



Original	Substituto	Original	Substituto
 Power	 Power	 Vol-	 Vol-
 Netflix	 Shift + Red / Netflix /	 i	 Info / Angle
 1	 1	 PR-	 CH- / Page-
 2	 2	 Menu	 Menu / Home
 3	 3	 Up	 Up
 4	 4	 Q.Menu	 D.Menu / Top
 5	 5	 Left	 Left
 6	 6	 OK	 OK
 7	 7	 Right	 Right
 8	 8	 Back	 Back / Return
 9	 9	 Down	 Down
 TV	 TV/Radio /	 EXit	 Exit / Cancel / Clear
 0	 0	 World	 Smart / List
 Recall	 Fav / Marker / PC	 Camera/Music/Ph	 Display / Media
 Vol+	 Vol+	 Guide	 Guide / EPG / -/--
 Mute	 Mute / Dimmer	 */o	 Picture / Format
 PR+	 CH+ / Page+	 Games	 AV / Input / RDS





	Original	Substituto	Original	Substituto
	[≡]/Text	Text / Goto		
	Red	Red / Netflix / Search		
	Green	Green / APP / Repeat		
	Yellow	Yellow / YouTube / Repeat		
	Blue	Blue / Prime Video / Random		
	Lang	Audio / Lang I/II		
	[≡]..	Subtitle / EQ		
	[-O-]	Zoom / Size		
	<<	<< / Tune-		
	Pause	Pause / Step / Freeze		
	>>	>> / Tune+		
	Rec	Rec / Rec Mode		
	Play	Play / Slow		
	Stop	Stop / Hold		

