



Original	Substituto	Original	Substituto
	Power		Power
	Netflix	+	Shift + Red / Netflix /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	TV		TV/Radio /
	0		0
	Recall		Fav / Marker / PC
	Vol+		Vol+
	Mute		Mute / Dimmer
	PR+		CH+ / Page+

Original	Substituto	Original	Substituto
	Vol-		Vol-
	i		Info / Angle
	PR-		CH- / Page-
	Menu		Menu / Home
	Up		Up
	Q.Menu		D.Menu / Top
	Left		Left
	OK		OK
	Right		Right
	Back		Back / Return
	Down		Down
	EXit		Exit / Cancel / Clear
	World		Smart / List
	Camera/Music/Ph		Display / Media
	Guide		Guide / EPG / -/-
	*/o		Picture / Format
	Games		AV / Input / RDS





Original	Substituto	Original	Substituto
 [=]/Text	 GOTO TEXT Text / Goto		
 Red	 NETFLIX SEARCH Red / Netflix / Search		
 Green	 APP REPEAT Green / APP / Repeat		
 Yellow	 YouTube REPEAT A-B Yellow / YouTube / Repeat		
 Blue	 Prime Video RANDOM Blue / Prime Video / Random		
 LANG.	 LANG I/II AUDIO Audio / Lang I/II		
 [=]..	 EQ SUBTITLE Subtitle / EQ		
 [-O-]	 SIZE ZOOM Zoom / Size		
 <<<	 TUNE- <<< / Tune-		
	 STEP-FREEZE Pause / Step / Freeze		
 >>>	 TUNE+ >>> / Tune+		
 ●	 REC MODE ● Rec / Rec Mode		
 ▶	 SLOW ▶ Play / Slow		
 ■	 HOLD ■ Stop / Hold		

