



Original	Substituto	Original	Substituto
 Power	 Power	 Vol-	 Vol-
 Netflix	 Shift + Red / Netflix /	 i	 Info / Angle
 1	 1	 PR-	 CH- / Page-
 2	 2	 Menu	 Menu / Home
 3	 3	 Up	 Up
 4	 4	 Q.Menu	 D.Menu / Top
 5	 5	 Left	 Left
 6	 6	 OK	 OK
 7	 7	 Right	 Right
 8	 8	 Back	 Back / Return
 9	 9	 Down	 Down
 TV	 TV/Radio /	 EXit	 Exit / Cancel / Clear
 0	 0	 World	 Smart / List
 Recall	 Fav / Marker / PC	 Camera/Music/Ph	 Display / Media
 Vol+	 Vol+	 Guide	 Guide / EPG / -/--
 Mute	 Mute / Dimmer	 */o	 Picture / Format
 PR+	 CH+ / Page+	 Games	 AV / Input / RDS

Original	Substituto	Original	Substituto
 Power	 Power	 TV	 DVD
 Netflix	 Shift + Red / Netflix /	 SLOW	 STEP-FREEZE
 1	 1	 HOLD	 REC MODE
 2	 2	 TUNE-	 TUNE+
 3	 3	 PRESET-	 PRESET+
 4	 4	 TITLE	 LANG UII
 5	 5	 EQ	 SURROUND
 6	 6	 SOUND	 AUDIO
 7	 7	 FORMAT	 SIZE
 8	 8	 PICTURE	 ZOOM
 9	 9	 TOP MENU	 OPT-TOOLS
 TV	 TV/Radio /	 GOTO	 RDS
 0	 0	 D.MENU	 AV INPUT
 Recall	 Fav / Marker / PC	 HOME MENU	 ANGLE INFO
 Vol+	 Vol+	 MENU	 OK
 Mute	 Mute / Dimmer	 CLEAR	 RETURN
 PR+	 CH+ / Page+	 EXIT	 BACK
		 CANCEL	 LIST
		 + VOL	 SMART
		 - VOL	 MEDIA
		 TV	 DISPLAY
		 DVD	 CH PAGE
		 CD - STB	 1
		 VIDEO	 2
		 TAPE	 3
		 TUNER	 4
		 AUX - HDD	 5
		 USB	 6
		BLUETOOTH	7
		PC	8
		FAV MARKER	9
		NETFLIX	0
		APP	GUIDE EPG
		YouTube	HDMI - SAT
		Prime Video	PC
		SEARCH	FAV MARKER
		REPEAT	HDMI - SAT
		REPEAT A-B	PC
		RANDOM	FAV MARKER
		Mandis SHOP	FAV MARKER
		www.mandis.tv	FAV MARKER





Original	Substituto	Original	Substituto
[=]/Text	GOTO TEXT Text / Goto		
Red	Red / Netflix / Search		
Green	Green / APP / Repeat		
Yellow	Yellow / YouTube / Repeat		
Blue	Blue / Prime Video / Random		
Lang	Audio / Lang I/II		
[=]..	Subtitle / EQ		
[-O-]	Zoom / Size		
<<	<< / Tune-		
Pause	Pause / Step / Freeze		
>>	>> / Tune+		
Rec	Rec / Rec Mode		
Play	Play / Slow		
Stop	Stop / Hold		

