
 
 




 
 



 
 















 









 


 


 







 









 










Original	Substituto
	Power
	Mute
	Nicam/A2
	Aspect
	P.Mode
	S.Mode
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Shift + GUIDE EPG / -/--
	0

Original	Substituto
	Recall
	Display
	Freeze
	Rec/Auto
	Red
	Green
	Yellow
	Blue
	Sleep
	Up
	Source
	Left
	Enter
	Right
	Down
	Menu
	Exit

	Back / Return
	Display / Media
	Pause / Step / Freeze
	Rec / Rec Mode
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Sleep / Timer
	Up
	AV / Input / RDS
	Left
	OK
	Right
	Down
	Menu / Home
	Exit / Cancel / Clear





Original	Substituto	Original	Substituto
 CH+ / Page+	 CH+ / Page+	 DTV	DTV
 Subtitle	 Subtitle / EQ	 EPG	EPG
 Vol+	 Vol+	 Tv/Radio	TV/Radio /
 CH-	 CH- / Page-		
 T.Shift	 Setup / OPT /		
 Vol-	 Vol-		
 Play/Pause/Hold	 Play / Slow		
 Play/Pause/Hold	 +  Shift + Stop /		
 <</Reveal	 << / Tune-		
 >>/Size	 Zoom / Size		
 >>/Size	 >> / Tune+		
 Stop/Index	 Stop / Hold		
 I<<	 I<< / Preset-		
 S.Page/>>>I	 >>I / Preset+		
 Text	 Text / Goto		
 FAV	 Fav / Marker / PC		
 Audio	 Audio / Lang I/II		

