



Original	Substituto	Original	Substituto
Power	Power	Vol-	Vol-
TV	TV/Radio /	Source	AV / Input / RDS
1	1	PR-	CH- / Page-
2	2	CH List	Smart / List
3	3	Menu	Menu / Home
4	4	FAV CH	Fav / Marker / PC
5	5	Tools	Setup / OPT /
6	6	Return	Shift + Back / Return
7	7	Up	Up
8	8	Left	Left
9	9	Enter	OK
[ ]	Display / Media	Right	Right
0	0	Info	Info / Angle
PRE-CH	Back / Return	Down	Down
Vol+	Vol+	Exit	Exit / Cancel / Clear
Mute	Mute / Dimmer	Red	Red / Netflix / Search
PR+	CH+ / Page+	Green	Green / APP / Repeat





Original	Substituto	Original	Substituto
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	TTX/MIX		Text / Goto
	SRS		Sound / Title
	P.Size		Zoom / Size
	Dual/I/II		Audio / Lang I/II
	Guide		Guide / EPG / -/--
	Subt		Subtitle / EQ
	<<		<< / Tune-
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Play		Play / Slow
	Stop		Stop / Hold

Original	Substituto	Original	Substituto

