

 



 

 

 



 

 

 



 

 

 

 

 













 

















 








 
 
 
 



 

 



 

Original	Substituto	Original	Substituto
	Power		Power
	Mute		Mute / Dimmer
	Open/Close		Eject / Surround
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Clear		Shift + Exit / Cancel / Clear
	0		0
	Repeat/Tv/Radi		Shift + Green / APP /
	I<<		I<< / Preset-
	<<		<< / Tune-

Original	Substituto	Original	Substituto
	>>		>> / Tune+
	>>I		>>I / Preset+
	Stop		Stop / Hold
	Play		Play / Slow
	Pause/Timeshift		Pause / Step / Freeze
	Guide		Guide / EPG / -/-
	PR+		CH+ / Page+
	Rec		Rec / Rec Mode
	PR List		Smart / List
	PR-		CH- / Page-
	Timer Rec		Sleep / Timer
	Home		Menu / Home
	Music ID		Display / Media
	Info/Display		Info / Angle
	Up		Up
	Left		Left
	Enter		OK





Original	Substituto
 Right	 Right
 Down	 Down
 Return	 Back / Return
 Title/Pop Up	 Sound / Title
 Disc Menu/Rec. List	 D.Menu / Top
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Marker	 Fav / Marker / PC
 Search	 Shift + Red / Netflix /
 Zoom	 Zoom / Size
 Text	 Text / Goto
 Subtitle	 Subtitle / EQ
 Exit	 Exit / Cancel / Clear
 Power Tv	 Shift + Power
 Vol+ Tv	 Vol+

Original	Substituto
 PR+ TV	 Shift + CH+ /
 AV/Input Tv	 AV / Input / RDS
 Vol- Tv	 Vol-
 PR- TV	 Shift + CH- /

