







 



 









 

 











































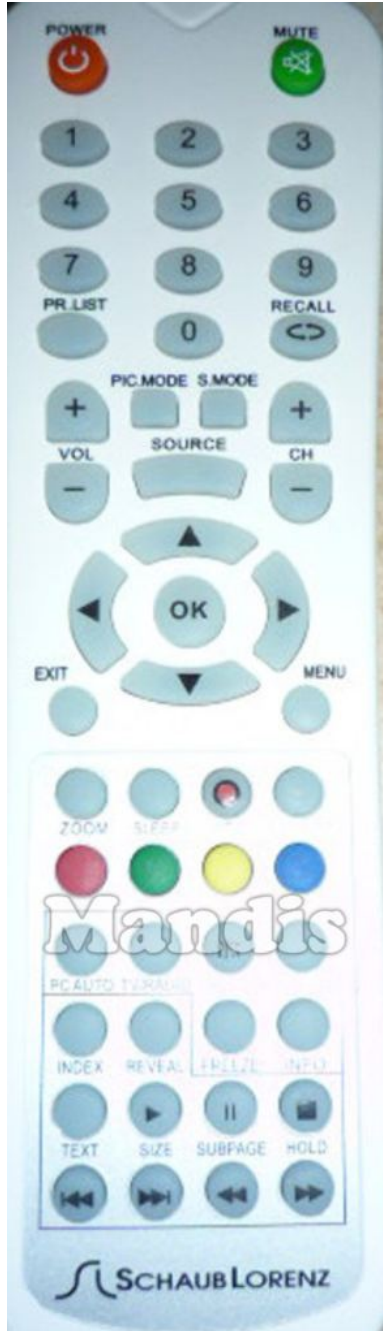


| Original | Substituto | Original | Substituto |
|---|------------|---|------------------|
|  | Power |  | Power |
|  | Mute |  | Mute / Dimmer |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | PR.List |  | Smart / List |
|  | 0 |  | 0 |
|  | Recall |  | Back / Return |
|  | Vol+ |  | Vol+ |
|  | Pic.Mode |  | Picture / Format |
|  | S.Mode |  | Sound / Title |

| Original | Substituto | Original | Substituto |
|---|------------|---|------------------------|
|  | CH+ |  | CH+ / Page+ |
|  | Vol- |  | Vol- |
|  | Source |  | AV / Input / RDS |
|  | CH- |  | CH- / Page- |
|  | Up |  | Up |
|  | Left |  | Left |
|  | OK |  | OK |
|  | Right |  | Right |
|  | Exit |  | Exit / Cancel / Clear |
|  | Down |  | Down |
|  | Menu |  | Menu / Home |
|  | Zoom |  | Zoom / Size |
|  | Sleep |  | Sleep / Timer |
|  | Rec |  | Rec / Rec Mode |
|  | Rec List |  | Shift + Rec / Rec Mode |
|  | Red |  | Red / Netflix / Search |
|  | Green |  | Green / APP / Repeat |





| Original | Substituto |
|----------|-----------------------------|
| | Yellow / YouTube / Repeat |
| | Blue / Prime Video / Random |
| | Eject / Surround |
| | TV/Radio / |
| | Audio / Lang I/II |
| | Subtitle / EQ |
| | Display / Media |
| | Shift + Back / Return |
| | Shift + Pause / Step / |
| | Info / Angle |
| | Text / Goto |
| | Play / Slow |
| | Pause / Step / Freeze |
| | Stop / Hold |
| | I<< / Preset- |
| | >>I / Preset+ |
| | << / Tune- |

| Original | Substituto |
|----------|------------|
| | >> / Tune+ |

