



 

 


 





Original	Substituto	Original	Substituto
	Power		Power
	e/Energy Saving		Display / Media
	AV Mode		Shift + AV / Input / RDS
	Input		AV / Input / RDS
	Tv/Rad		TV/Radio /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	List		Smart / List
	0		0
	Q.View		Zoom / Size

Original	Substituto	Original	Substituto
	Vol+		Vol+
	FAV/Mark		Fav / Marker / PC
	P+		CH+ / Page+
	Vol-		Vol-
	Ratio		Picture / Format
	P-		CH- / Page-
	Mute		Mute / Dimmer
	Guide		Guide / EPG / -/-
	Home		Menu / Home
	Q.Menu		D.Menu / Top
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Back		Back / Return
	Info		Info / Angle





Original	Substituto	Original	Substituto
Exit	Exit / Cancel / Clear		
Red	Red / Netflix / Search		
Green	Green / APP / Repeat		
Yellow	Yellow / YouTube / Repeat		
Blue	Blue / Prime Video / Random		
Text	Text / Goto		
T.Opt.	Setup / OPT /		
Subtitle	Subtitle / EQ		
Stop	Stop / Hold		
Play	Play / Slow		
Pause/Freeze	Pause / Step / Freeze		
<<	<< / Tune-		
>>	>> / Tune+		
Simplink	+ Shift + Smart / List		
AD	Audio / Lang I/II		

