 



 

 







 

 







 



 









Original	Substituto
 Power	 Power
 Setup	 Setup / OPT /
 DTV	 D.Menu / Top
 1	 1
 2	 2
 3	 3
 HDMI/AV	 AV / Input / RDS
 4	 4
 5	 5
 6	 6
 Disc	 Shift + 3
 7	 7
 8	 8
 9	 9
 Rec	 Rec / Rec Mode
 EPG	 Guide / EPG / -/--
 TTX	 Text / Goto

Original	Substituto
 0	 0
 Movie	 Display / Media
 Music	 Smart / List
 Photo	 Picture / Format
 Vol-	 Vol-
 Vol+	 Vol+
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Home	 Menu / Home
 Edit	 Back / Return
 Copy	 Shift + Smart / List
 Repeat	 Green / APP / Repeat
 <<	 << / Tune-





Original	Substituto
Play/Pause	Play / Slow
I<<	I<< / Preset-
>>	>> / Tune+
Stop	Stop / Hold
>>I	>>I / Preset+
Audio	Audio / Lang I/II
Sub-T	Subtitle / EQ
FAV	Fav / Marker / PC
Info	Info / Angle
Mute	Mute / Dimmer
DVD	Shift + 2
Timer	Sleep / Timer
T/R	Zoom / Size

Original	Substituto

