




 



| Original | Substituto |
|--|--|
|  Open/Close |  Eject / Surround |
|  Input Select |  AV / Input / RDS |
|  HDMI |  Shift + 0 |
|  Standby |  Power |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  Prog+ |  CH+ / Page+ |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  Prog- |  CH- / Page- |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  Timer Prog |  Sleep / Timer |
|  Setup |  Setup / OPT / |

| Original | Substituto |
|---|--|
|  0 |  0 |
|  Clear |  Exit / Cancel / Clear |
|  [i+]/Info |  Info / Angle |
|  Text |  Text / Goto |
|  Variable Replay |  Vol+ |
|  Variable Skip |  Vol- |
|  Guide |  Guide / EPG / -/- |
|  Top Menu |  D.Menu / Top |
|  Disc Menu |  Menu / Home |
|  Up |  Up |
|  Left |  Left |
|  Enter |  OK |
|  Right |  Right |
|  Display |  Display / Media |
|  Down |  Down |
|  Return |  Back / Return |
|  Red |  Red / Netflix / Search |





| Original | Substituto | Original | Substituto |
|---|---|---|---|
|  Green |  Green / APP / Repeat |  Rec |  Rec / Rec Mode |
|  Yellow/Mode |  Yellow / YouTube / Repeat |  Subtitle |  Subtitle / EQ |
|  Blue/Search |  Blue / Prime Video / Random |  1.3x/0.8x PLY |  Shift + Play / |
|  Blue/Search |  Shift + Red / Netflix / |  O)/Audio |  Audio / Lang I/II |
|  << |  << / Tune- |  Sat Link |  Smart / List |
|  Play |  Play / Slow | | |
|  >> |  >> / Tune+ | | |
|  I<< |  I<< / Preset- | | |
|  Stop |  Stop / Hold | | |
|  >>I |  >>I / Preset+ | | |
|  Pause |  Pause / Step / Freeze | | |
|  VCR |  Shift + 4 | | |
|  HDD |  Shift + 7 | | |
|  DVD |  Shift + 2 | | |
|  Time Slip |  TV/Radio / | | |
|  Dubbing |  Picture / Format | | |
|  Rec Mode |  Shift + Rec / Rec Mode | | |

