



| Original                                                                            | Substituto                     |
|-------------------------------------------------------------------------------------|--------------------------------|
|    | Power                          |
|    | Stop / Hold                    |
|    | Pause / Step / Freeze          |
|    | << / Tune-                     |
|    | Play / Slow                    |
|    | >> / Tune+                     |
|    | Red / Netflix / Search         |
|    | Green / APP / Repeat           |
|    | Yellow / YouTube / Repeat      |
|    | Blue / Prime Video / Random    |
|  | Shift + Red / Netflix / Search |
|  | Guide / EPG / -/--             |
|  | Menu / Home                    |
|  | D.Menu / Top                   |
|  | Up                             |
|  | I<< / Preset-                  |
|  | CH- / Page-                    |

| Original                                                                              | Substituto       |
|---------------------------------------------------------------------------------------|------------------|
|    | Left             |
|    | OK               |
|    | Right            |
|    | >>I / Preset+    |
|    | CH+ / Page+      |
|    | Down             |
|    | AV / Input / RDS |
|    | Back / Return    |
|    | Setup / OPT /    |
|    | Vol-             |
|  | Mute / Dimmer    |
|  | Vol+             |
|  | 1                |
|  | 2                |
|  | 3                |
|  | 4                |
|  | 5                |



