







 

























 

 

 

 
 














 

 





 

 





Original	Substituto
	 Power
	 Mute / Dimmer
	 1
	 2
	 3
	 Eject / Surround
	 4
	 5
	 6
	 Shift + Text /
	 7
	 8
	 9
	 0
	 Menu / Home
	 AV / Input / RDS
	 Up

Original	Substituto
	 Left
	 OK
	 Right
	 Down
	 D.Menu / Top
	 Exit / Cancel / Clear
	 Vol+
	 Sound / Title
	 CH- / Page-
	 Vol-
	 Picture / Format
	 CH+ / Page+
	 Sleep / Timer
	 Shift + Picture / Format
	 Setup / OPT /
	 Shift + Back / Return
	 Text / Goto





Original	Substituto	Original	Substituto
 EPG	 Guide / EPG / -/--	 Subtitle	 Subtitle / EQ
 Play	 Play / Slow	 Reveal	 Shift + Exit / Cancel / Clear
 Pause	 Pause / Step / Freeze	 Hold	 Shift + Stop /
 Stop	 Stop / Hold	 List	 Smart / List
 FAV	 Fav / Marker / PC	 Index	 TV/Radio /
 Info	 Info / Angle	 Subpage	 Shift + Smart / List
 Red/DVD/USB	 Red / Netflix / Search	 Size	 Zoom / Size
 Green/Title	 Green / APP / Repeat	 Mix	 Shift + Display / Media
 Yellow/PBC	 Yellow / YouTube / Repeat	 Freeze	 Shift + Pause / Step /
 Blue/Angle	 Blue / Prime Video / Random		
 <<	 << / Tune-		
 >>	 >> / Tune+		
 I<<	 I<< / Preset-		
 >>I	 >>I / Preset+		
 Return	 Back / Return		
 Display	 Display / Media		
 DVD Audio	 Audio / Lang I/II		

