







 

























 

 

 

 
 














 

 





 

 





| Original  | Substituto   |
|---|--|
|    |  Power              |
|    |  Mute / Dimmer      |
|    |  1                  |
|    |  2                  |
|    |  3                  |
|    |  Eject / Surround   |
|    |  4                  |
|    |  5                  |
|    |  6                  |
|    |  Shift + Text /     |
|   |  7                 |
|  |  8                |
|  |  9                |
|  |  0                |
|  |  Menu / Home      |
|  |  AV / Input / RDS |
|  |  Up               |

| Original  | Substituto   |
|---|--|
|    |  Left                       |
|    |  OK                         |
|    |  Right                      |
|    |  Down                       |
|    |  D.Menu / Top               |
|    |  Exit / Cancel / Clear      |
|    |  Vol+                       |
|    |  Sound / Title              |
|    |  CH- / Page-                |
|    |  Vol-                       |
|   |  Picture / Format          |
|  |  CH+ / Page+              |
|  |  Sleep / Timer            |
|  |  Shift + Picture / Format |
|  |  Setup / OPT /            |
|  |  Shift + Back / Return    |
|  |  Text / Goto              |





| Original    | Substituto                  |
|-------------|-----------------------------|
| EPG         | Guide / EPG / -/--          |
| Play        | Play / Slow                 |
| Pause       | Pause / Step / Freeze       |
| Stop        | Stop / Hold                 |
| FAV         | Fav / Marker / PC           |
| Info        | Info / Angle                |
| Red/DVD/USB | Red / Netflix / Search      |
| Green/Title | Green / APP / Repeat        |
| Yellow/PBC  | Yellow / YouTube / Repeat   |
| Blue/Angle  | Blue / Prime Video / Random |
| <<          | << / Tune-                  |
| >>          | >> / Tune+                  |
| I<<         | I<< / Preset-               |
| >>I         | >>I / Preset+               |
| Return      | Back / Return               |
| Display     | Display / Media             |
| DVD Audio   | Audio / Lang I/II           |

| Original | Substituto                    |
|----------|-------------------------------|
| Subtitle | Subtitle / EQ                 |
| Reveal   | Shift + Exit / Cancel / Clear |
| Hold     | Shift + Stop /                |
| List     | Smart / List                  |
| Index    | TV/Radio /                    |
| Subpage  | Shift + Smart / List          |
| Size     | Zoom / Size                   |
| Mix      | Shift + Display / Media       |
| Freeze   | Shift + Pause / Step /        |

