



Original	Substituto	Original	Substituto
	Power		Power
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK/ Select		Ok
	Menu		Menu
	[ i ]/ I n f o		I n f o
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	PP		Pre Ch
	- / - -		Shi ft + Gui de
	P<P		Back
	CH-		Ch -
	CH+		Ch +
	Vol +		Vol +
	Vol -		Vol -
	Mut e		Mut e
	I - I I		Dual
	DTV/ TV		TV/ R
	AV		AV
	Red/ Sound/ ▲		Red
	Green/ Pi ct ure/ ▼		Green
	Yel l ow/ Feat ure		Yel l ow
	Bl ue/ I nst al l		Bl ue
	[ = ] / Text		Text



