






Original	Substituto
 Power	 Power
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 Guide / EPG / -/--
 PRE-CH	 0
 TV	 Back / Return
 CH.MGR	 Display / Media
 Sleep	 Smart / List
	 Sleep / Timer

Original	Substituto
 PC	 Fav / Marker / PC
 Vol+	 Vol+
 P+	 CH+ / Page+
 Mute	 Mute / Dimmer
 Vol-	 Vol-
 P-	 CH- / Page-
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 [≡+]/PIP	 Play / Slow
 [≡?]/Info	 Info / Angle
 TTX/MIX	 Text / Goto
 Red / P.Mode	 Red / Netflix / Search





Original	Substituto
Red / P.Mode	Picture / Format
Green / S.Mode	Green / APP / Repeat
Green / S.Mode	Sound / Title
Yellow / Still	Yellow / YouTube / Repeat
Yellow / Still	Pause / Step / Freeze
Blue / P.Size	Blue / Prime Video / Random
[≡♦] / PIP Source	Stop / Hold
[≡◇] / PIP Swap	>> / Tune+
Size	Zoom / Size
PIP P+	>>I / Preset+
I-II/Dual	Audio / Lang I/II
(o)/SRS	Eject / Surround
PIP Position	<< / Tune-
PIP P-	I<< / Preset-

Original	Substituto

