 













 



 



 


 







 







 
 
 




 

 







 





 







Original	Substituto	Original	Substituto
 Power	 Power	 4	 4
 Red/↑	 Red / Netflix / Search	 5	 5
 green/↓	 Green / APP / Repeat	 6	 6
 Yellow	 Yellow / YouTube / Repeat	 7	 7
 Blue	 Blue / Prime Video / Random	 8	 8
 Exit	 Exit / Cancel / Clear	 9	 9
 [≡o]	 Sleep / Timer	 P<P/Swap	 Picture / Format
 [≡+]	 Stop / Hold	 0	 0
 [≡x]	 Smart / List	 -/--	 Shift + Guide / EPG / -/--
 [≡]	 Text / Goto	 Vol-	 Vol-
 [ /≡]	 Setup / OPT /	 Vol+	 Vol+
 [≡◆]/[+]/Wide	 Menu / Home	 Mute	 Mute / Dimmer
 [≡?]	 Shift + Info / Angle	 P-	 CH- / Page-
 [≡i]/Guide	 Guide / EPG / -/--	 P+	 CH+ / Page+
 1	 1	 [i]/Info	 Info / Angle
 2	 2	 Tv/DTV	 TV/Radio /
 3	 3	 [AV]/Source	 AV / Input / RDS





Original	Substituto	Original	Substituto
	I-II		Audio / Lang I/II
	PP		Back / Return
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	M		D.Menu / Top
	Down		Down

