









 



 


 

 

 

 

 









 

 



 


 






 

 

 
 

 
 
 
 

 



 







Original	Substituto	Original	Substituto
	Power		Power
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK/Select		Ok
	M		Menu
	[ i ]/Info		Info
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Exit/-/--		Exit
	PP		Pre Ch
	Swap/P<P		Smart
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	I-II		Dual
	Tv/DTV		TV/R
	AV/Source		AV
	Red/↑		Red
	Green/↓		Green
	Yellow		Yellow
	Blue		Blue
	[≡]		Text





Original	Substituto	Original	Substituto
 [=+]/[X]	 Format		
 [=x]/[■ ■]	 Subt		
 [=o]	 Options		
 [=◇]/[+]/Wide	 3D		
 [.≡]/[■]	 Back		
 [=?]	 Media		
 Guide/[≡i]	 Guide		

Original	Substituto

