







 






 






 












 


 
 


 


 



 



 
 
 
 


 

 










Original	Substituto	Original	Substituto
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Pre Ch
	Source		AV
	ATV		Shift + Smart
	DTV		Smart
	EPG		Guide
	Radio		TV/R
	▼/O)/I/II/I+II		Dual
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	P+		Ch +
	P-		Ch -
	P.Info		Info
	[i+]		List
	AV Mode		Format
	[<>]		Eject
	Eco		3D
	Menu		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok





	Original	Substituto	Original	Substituto
	End	Exit		Options
	Back	Back		Rec
	Red	Red		+  Shift + Stop
	Green	Green		Stop
	Yellow	Yellow		
	Blue	Blue		
	[≡]	Text		
	[≡?]	+  Shift + Subt		
	[...]	Subt		
	[≡+]	+  Shift + Options		
	[≡o]	+  Shift + Dual		
	[≡◆]	+  Shift + TV/R		
	Sleep	Sleep		
	Power Aquos Link	+  Shift + Power		
	<<	<<		
	Play	Play		
	>>	>>		

