









 


 














 


 









 






 


 




 















	Original	Substituto		Original	Substituto
	Standby/On		Power		I<<
	1		1		>>I
	2		2		Play
	3		3		Stop
	4		4		<<
	5		5		>>
	6		6		Mute
	7		7		Prog+
	8		8		Prog-
	9		9		Vol+
	0		0		Vol-
	Tv/DVD		TV/R		Menu
	Open/Close		Eject		Return
	DTV/Analog		Smart		Exit
	Input Sel		AV		Title List/Disc Menu
	Copy		Options		Play List/Title Menu
	Pause		Pause		Red





Original	Substituto
	Green
	Yellow
	Blue
	Guide
	Info
	Subtitle
	Text
	Tv/Radio
	FAV List
	Marker
	Rec
	Audio
	Rec Mode
	Rec
	Repeat
	OK
	Up

Original	Substituto
	Down
	Right
	Left
	USB
	Timer
	HDD
	SHIFT +  Shift + Media
	SHIFT +  Shift + AV
	SHIFT +  Shift + Smart












 

 



 



















 



 

 










 
 







 
 







	Original	Substituto	Original	Substituto
	Input Sel		AV	AV
	1		1	1
	2		2	2
	3		3	3
	4		4	4
	5		5	5
	6		6	6
	7		7	7
	8		8	8
	9		9	9
	0		0	0
	Prog+		Ch +	Ch +
	Prog-		Ch -	Ch -
	Standby/On TV		Power	Power
	Mute Tv		Mute	Mute
	Tv Vol+		Vol +	Vol +
	Tv Vol-		Vol -	Vol -

 
 


 
 


 
 
 





 
 








 

 









 

 



Original	Substituto	Original	Substituto
 Standby/On	 Power	  <<	  <<
 1	 1	 >>	 >>
 2	 2	 Play	 Play
 3	 3	 Stop	 Stop
 4	 4	 <<	 <<
 5	 5	 >>	 >>
 6	 6	 Prog+	 Ch +
 7	 7	 Prog-	 Ch -
 8	 8	 Menu	 Menu
 9	 9	 Return	 Back
 0	 0	 Exit	 Exit
 Tv/DVD	 TV/R	 Title List/Disc Menu	 Media
 Open/Close	 Eject	 Play List/Title Menu	 Shift + Menu
 DTV/Analog	 Smart	 Red	 Red
 Input Sel	 AV	 Green	 Green
 Copy	 Options	 Yellow	 Yellow
 Pause	 Pause	 Blue	 Blue





Original		Substituto	
	Guide		Guide
	Info		Info
	Subtitle		Subt
	Text		Text
	Tv/Radio		D. Menu
	FAV List		Pre Ch
	Marker		Shift + Options
	Rec		Rec
	Audio		Dual
	Rec Mode		Shift + Rec
	Rec		Format
	Repeat		Shift + Text
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left

Original		Substituto	
	USB		Shift + Media
	Timer		Shift + AV
	HDD		Shift + Smart

