







Original	Substituto
	Source / AV / Input / RDS
	Power
	Shift + OK
	Zoom / Size
	Shift + Smart / List
<</<I button icon"/>	<< / Tune-
	Play / Slow
>>/I> button icon"/>	>> / Tune+
	Shift + D.Menu / Top Menu
	I<< / Preset-
	Stop / Hold
>>I button icon"/>	>>I / Preset+
	Shift + Setup / OPT / Tools
	Picture / Format
	Shift + Menu /
	D.Menu / Top
	Shift + Display / Media

Original	Substituto
	Exit / Cancel / Clear
	Display / Media
	Smart / List
	Fav / Marker / PC
	Guide / EPG / -/-
	Right
	Info / Angle
	Up
	OK
	Left
	Back / Return
	Down
	Setup / OPT /
	Menu / Home
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat





Original	Substituto
 Blue	 Blue / Prime Video / Random
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 [=]/Text	 Text / Goto
 0	 0
 [...]	 Subtitle / EQ
 Vol+	 Vol+
 Prog+	 CH+ / Page+
 Mute	 Mute / Dimmer
 Audio	 Audio / Lang I/II


Original	Substituto
 Vol-	 Vol-
 Prog-	 CH- / Page-







 







 

 

 



 














 

 



 





 









 

 

 







Original	Substituto
 Power	 Power
 <</<	 << / Tune-
 Play	 Play / Slow
 >>/ >	 >> / Tune+
  <<	  << / Preset-
 Stop	 Stop / Hold
 >>	 >>  / Preset+
 Top Menu	 D.Menu / Top
 Menu	 Menu / Home
 Right	 Right
 [i+]/Info	 Info / Angle
 Up	 Up
 Left	 Left
 Return	 Back / Return
 Down	 Down
 Home	 Shift + Menu /
 1	 1

Original	Substituto
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 [...]	 Subtitle / EQ
 Prog+	 CH+ / Page+
 Audio	 Audio / Lang I/II
 Prog-	 CH- / Page-





Original	Substituto
 Power	 Power
 <</<	 << / Tune-
 Play	 Play / Slow
 >>/ >	 >> / Tune+
 I<<	 I<< / Preset-
 Stop	 Stop / Hold
 >>	 >>  / Preset+
 Top Menu	 D.Menu / Top
 Menu	 Menu / Home
 Right	 Right
 [i+]/Info	 Info / Angle
 Up	 Up
 OK	 OK
 Left	 Left
 Return	 Back / Return
 Down	 Down
 Options	 Setup / OPT /

Original	Substituto
 Home	 Shift + Menu /
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 [≡]/Text	 Text / Goto
 0	 0
 [...]	 Subtitle / EQ









Original	Substituto
	 AV / Input / RDS
	 Power
	 << / Tune-
	 Play / Slow
	 >> / Tune+
	 I<< / Preset-
	 Stop / Hold
	 >>I / Preset+
	 D.Menu / Top
	 Menu / Home
	 Right
	 Info / Angle
	 Up
	 OK
	 Left
	 Back / Return
	 Down

Original	Substituto
	 Shift + Menu /
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Text / Goto
	 0
	 Subtitle / EQ
	 Vol+
	 Mute / Dimmer
	 Audio / Lang I/II
	 Vol-

