




 

 

 

 

 

 

 

 

 

 
 
 

 
 
 




 

 

 
 

 
 

 

 
 


 







Original	Substituto	Original	Substituto
 Power Tv	 Power	 1	 1
 Input 1	 Shift + 1	 2	 2
 Input 2	 Shift + 2	 3	 3
 Input 3	 Shift + 3	 4	 4
 Input 4	 Shift + 4	 5	 5
 Input 5	 Shift + 5	 6	 6
 Input 6	 Shift + 6	 7	 7
 Input 7	 Shift + 7	 8	 8
 Input 8	 Shift + 8	 9	 9
 TV	 TV/Radio /	 [i+]/Info	 Shift + Info / Angle
 DTV	 D.Menu / Top	 0	 0
 Radio	 Shift + TV/Radio / Program	 P.Info	 Info / Angle
 [≡o]	 Sleep / Timer	 P+	 CH+ / Page+
 [...]	 Subtitle / EQ	 CH.Return	 Shift + Back / Return
 [≡?]	 Shift + AV / Input / RDS	 Vol+	 Vol+
 [≡+]	 Shift + Stop /	 P-	 CH- / Page-
 [≡]	 Text / Goto	 Mute	 Mute / Dimmer





Original	Substituto	Original	Substituto
	Vol-		Vol-
	X/Exit		Exit / Cancel / Clear
	EPG/DVD Top Menu/Guide		Guide / EPG / -/--
	Down		Down
	Left		Left
	Enter		OK
	Right		Right
	Menu/Home		Menu / Home
	Up		Up
	Return		Back / Return
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	I<<		I<< / Preset-
	Blue		Blue / Prime Video / Random
	>>I		>>I / Preset+
	Pause/Standby		Pause / Step / Freeze
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	CTRL/HDMI		Display / Media
	Rec		Rec / Rec Mode
	Rec Stop		Shift + Rec / Rec Mode
	Stop		Stop / Hold
	·->/CM Skip		Shift + >> /
	Tools/I-II		Setup / OPT /
	DVD/Screen		Zoom / Size
	HDD/AV Selection		AV / Input / RDS

