 



 





 

 


 
 

 

 



 



 
 


 

 
 
 

 
 


 
 
 

 

 
 
 
 
 

 


 



 
 


 






Original	Substituto	Original	Substituto
 Power	 Power	 Menu	 Menu
 Mute	 Mute	 Exit	 Exit
 1	 1	 Source	 AV
 2	 2	 Display	 Info
 3	 3	 Up	 Up
 4	 4	 Down	 Down
 5	 5	 Right	 Right
 6	 6	 Left	 Left
 7	 7	 Enter	 Ok
 8	 8	 Lang/Audio	 Dual
 9	 9	 Reclist	 List
 0	 0	 Rec	 Rec
 DTV/ATV	 Smart	 FAV/List	 Pre Ch
 Return	 Back	 Freeze	 Media
 P.Mode	 Shift + Format	 Vol+	 Vol +
 S.Mode	 Shift + Dual	 Vol-	 Vol -
 Sleep	 Sleep	 CH+	 Ch +





Original	Substituto	Original	Substituto
CH-	Ch -	Green	Green
EPG	Guide	Yellow	Yellow
Aspect	3D	Blue	Blue
<<<	<<<		
>>>	>>>		
Pause/Timeshift	Pause		
I<</Cancel	I<<		
>>I/Sub.Pg	>>I		
Stop/Index	Stop		
Play	Play		
Tv/Radio	TV/R		
Subtitle	Subt		
Reveal	Options		
Size	Format		
Hold	Eject		
Text	Text		
Red	Red		

